

TECHNIQUES FOR ASSIGNING INTER-TIER SIGNALS TO BONDPOINTS IN A FACE-TO-FACE BONDED 3DIC

GOPI NEELA AND JEFFREY DRAPER

MARINA GROUP :: INFORMATION SCIENCES INSTITUTE :: VITERBI SCHOOL OF ENGINEERING

INTRODUCTION

- In a three-dimensional integrated circuit (3DIC), multiple active layers are stacked vertically to make a single chip
- Why 3DIC? High device density, smaller chip footprint, shorter interconnects, heterogeneous integration, chip security, etc.
- Tiers are interconnected using 3D-vias: top metal layer microbumps (bondpoints) or through-silicon-vias (TSVs)
- In a 3DIC, the locations of 3D-vias have a significant effect on cell placement in a tier
- For large designs manual assignment for 3D-vias is impractical and demands automated techniques
- Related work presented an automated approach which uses information only from one tier to make the assignment, while others used a manual assignment
- As face-to-face (F2F) bonded 3DIC is best suited for logic-onlogic stacked 3DIC, four new approaches for assigning signals to bondpoints for this case are introduced
- Proposed techniques successfully automate the assignment

NEAREST-NEIGHBOR ALGORITHM

- Input: *B* List of M available bondpoint locations
 Input: *C* List of N source/sink cells locations
 Output: *A* Assignment List
- **Require**: $N \le M$
- 1. **for** each location *i* in *C* **do**
- 2. *j* = FindClosestBondpoint(*i*,*B*);
- 3. Mark *j* in *B* as assigned;
- 4. Append (i,j) assignment to A;
- 5. end for
- 6. **return** *A*;

MIDPOINT APPROACH

- Aims to assign a bondpoint that is midway between the source cell in one tier and sink cell in the other tier, along a minimum-distance path
- Source-sink pairs of all inter-tier signals are sorted in increasing order of distance between the source and sink

and in most cases achieve better results than an architecturedriven manual assignment

PROPOSED ASSIGNMENT TECHNIQUES

- All techniques are two-step procedures:
- 1. Estimate the locations of inter-tier signals' source/sink cells
 - Common first step in all techniques
- 2. Using available bondpoints locations and result of step-1, make an assignment
 - Available bondpoints exclude those reserved for power rails: VDD and Ground
 - Four different procedures are introduced: three variants of nearestneighbor and one midpoint approach
- Using the assignment, a final PAR is executed on both tiers

INTER-TIER SIGNAL REFERENCE LOCATION ESTIMATION

Procedure:

- 1. Set inter-tier signals to wires in synthesized netlist
- 2. Trial place a tier
 - I/O signals and floorplan (if any) guide the trial placement
- 3. Find the locations of cells that source/sink an inter-tier signal

2

3

- Center of the cell is approximated as the required location
- Fan-out issue: How to choose a location?
 - Random: may not have significant effect
 - Any point on minimum rectilinear Steiner tree

cells and then assigned a bondpoint in that order

 The closer the pair, the lower the number of candidate bondpoints O O O O O Bondpoints

0 0 0

 $\bigcirc _ \bigcirc _ \bigcirc _ \bigcirc _ \bigcirc \bigcirc \bigcirc$

 \bigcirc

 \bigcirc

 \bigcirc

 \bigcirc

• Source

Sink

 \bigcirc

 \bigcirc

MIDPOINT ALGORITHM

Input: *B* – List of M available bondpoint locations

Input: *CM* – List of N entries, each entry a pair of source and sink colls locations, one of them from tion 1 and other from tion 2

cells locations, one of them from tier-1 and other from tier-2

Output: *A* – Assignment List

Require: $N \le M$

- 1. **for** each *i* in *CM* **do**
- 2. Compute Manhattan distance between source and sink
- 3. end for
- 4. *CM* ← SortIncreasingOrderOfDistance(*CM*);
- 5. **for** each *i* in *CM* **do**
- 6. *j* = FindMinimumLengthConnectingBondpoint (*i*,*B*);
- 7. Mark *j* in *B* as assigned;
- 8. Append (i,j) assignment to A;
- 9. **end for**
- 10. **return** *A*;

ANALYSIS

- In NNC and midpoint approaches, a temporary placement is required on both the tiers, whereas NN1 and NN2 require a placement in only one of the tiers, tier-1 and tier-2, respectively
- Midpoint is computationally more expensive
 - But all procedures have complexity of O(M²) in second step

- Center of the smallest rectangle enclosing sinks
- Past research did not address this issue

NEAREST-NEIGHBOR APPROACH


In nearest-neighbor (NN), an inter-tier signal is assigned to an available bondpoint which is closest to its reference location

Three types:

- NN1: Reference locations are from tier-1
- NN2: Reference locations are from tier-2
- NNC (Combined): Only location information from source cells is used for assignment
 - Every inter-tier signal has exactly one source cell, and it could be in either one of the tiers
 - For each inter-tier signal, its source cell location is taken from the tier in which it is placed
 - No confusion of which sink cell to select, if fan-out is more than one

The order of assignment is fixed in midpoint approach due to sorting, but in NN the order is random

RESULTS AND CONCLUSIONS

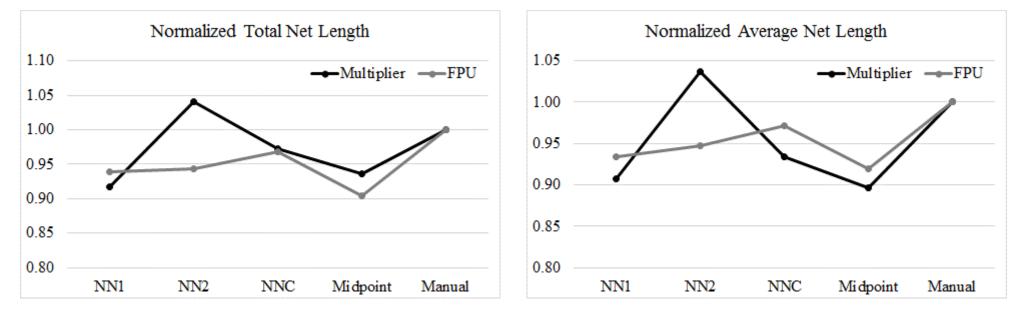

- 3DIC designs of a multiplier and a FPU were implemented with the four proposed techniques, and a manual assignment
- Midpoint results are more consistent than the others, having about 10% lower average net length than manual assignment
- Proposed techniques successfully automate the assignment and in most cases achieve better results than manual method



USCUniversity of Southern California

Ming Hsieh Department of Electrical Engineering



School of Engineering Information Sciences Institute